


Click photo to zoom in 

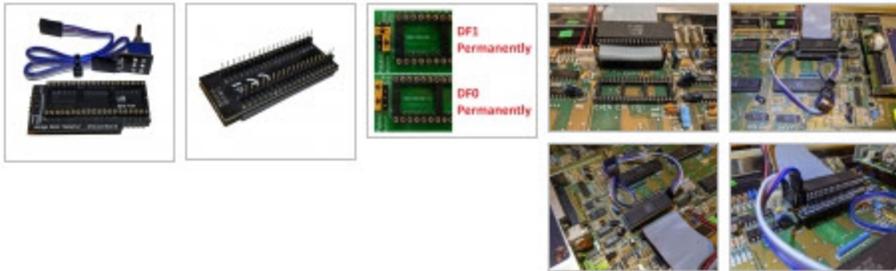

BOOT SELECTOR DF0/DF1 DF1/DF0 SIGNAL SEL0 FROM SEL1 AMIGA 500

#548

€ 13.99

Quantity

1

+

-



BUY NOW

Availability:



SHIPPING: IRL - €0.00 | EUROPE - €1.65 | USA - €1.95

Boot Selector DF0/DF1 DF1/DF0 Signal SEL0 from SEL1 Amiga 500

New better version with golden PINs and now compatible even with GBA1000.

This device can change your floppy drive from DF0 to DF1 and opposite. By switch the button you can change your internal DF0 into DF1 or you can change your external floppy drive (also Gotek HxC, Gotek Cortex, HxC made by Lotharek) into DF0 and you can boot from your external drive without any problem.


The best option for Gotek and HxC owners who wants to boot games normally from DF1 external, additional floppy drive. Please note you can switch only if Amiga is off.

How to install:

- 1.) Switch off your Amiga.
- 2.) Remove CSG module (based near floppy cable)
- 3.) Put boot selector into CSG module socket
- 4.) Put CSG module on top of the boot selector
- 5.) Connect switch on/off to boot selector (included)


Switcher should be installed on the right side golden PINs (please see photo) and does not matter which way you will connect it. It will work anyway.

You can use this item on 2 different ways - with switcher (included) or without switcher using jumpers for permanently settings (included).

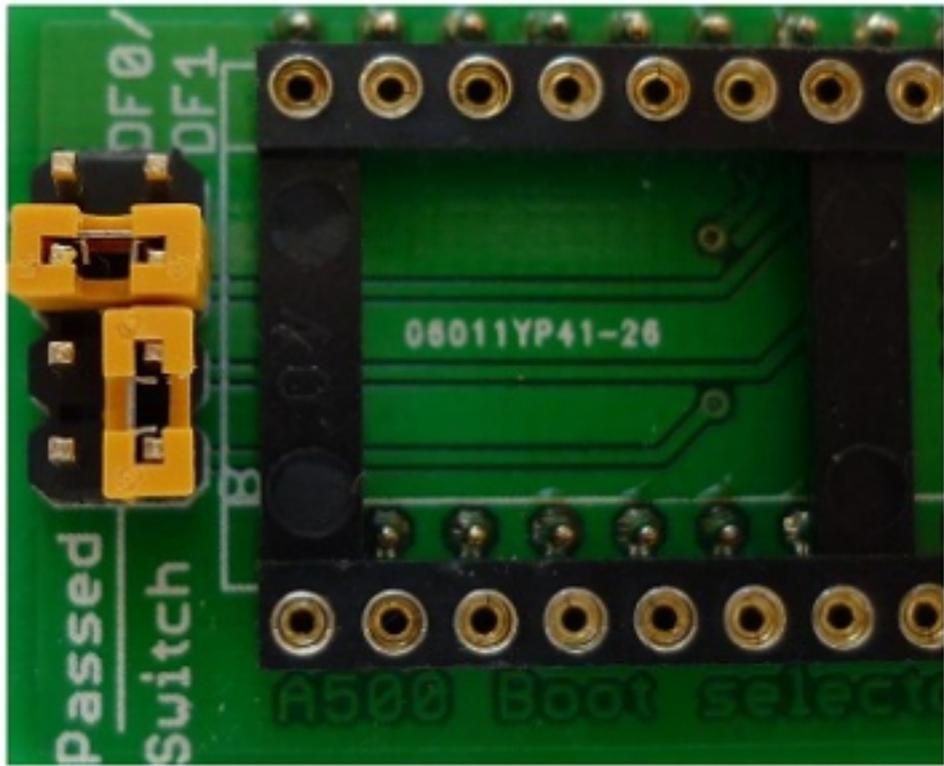


DF1



Permanently

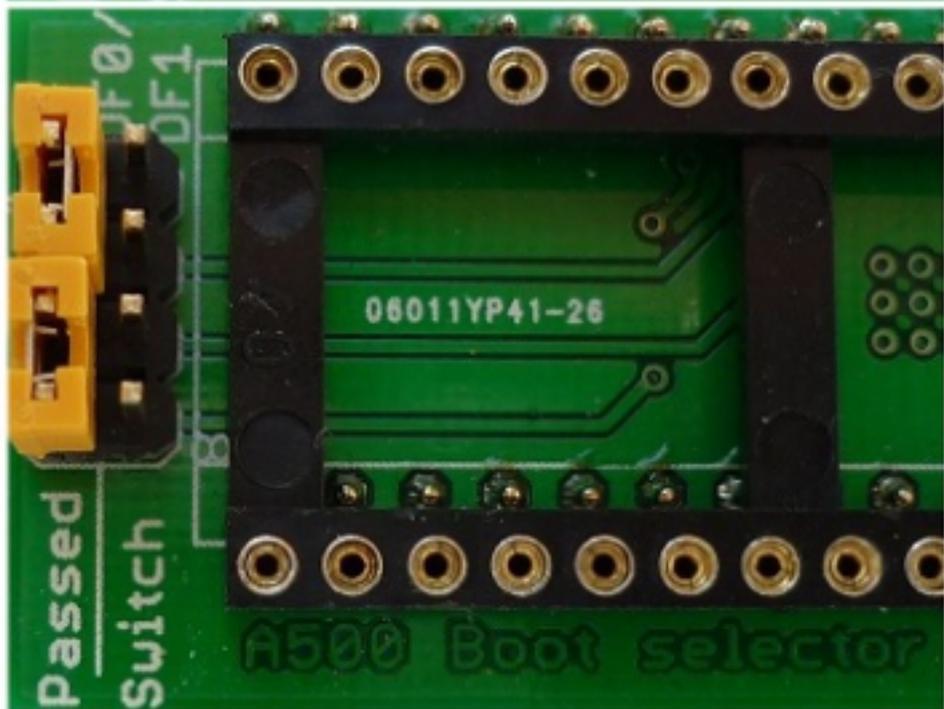



DF0

Permanently

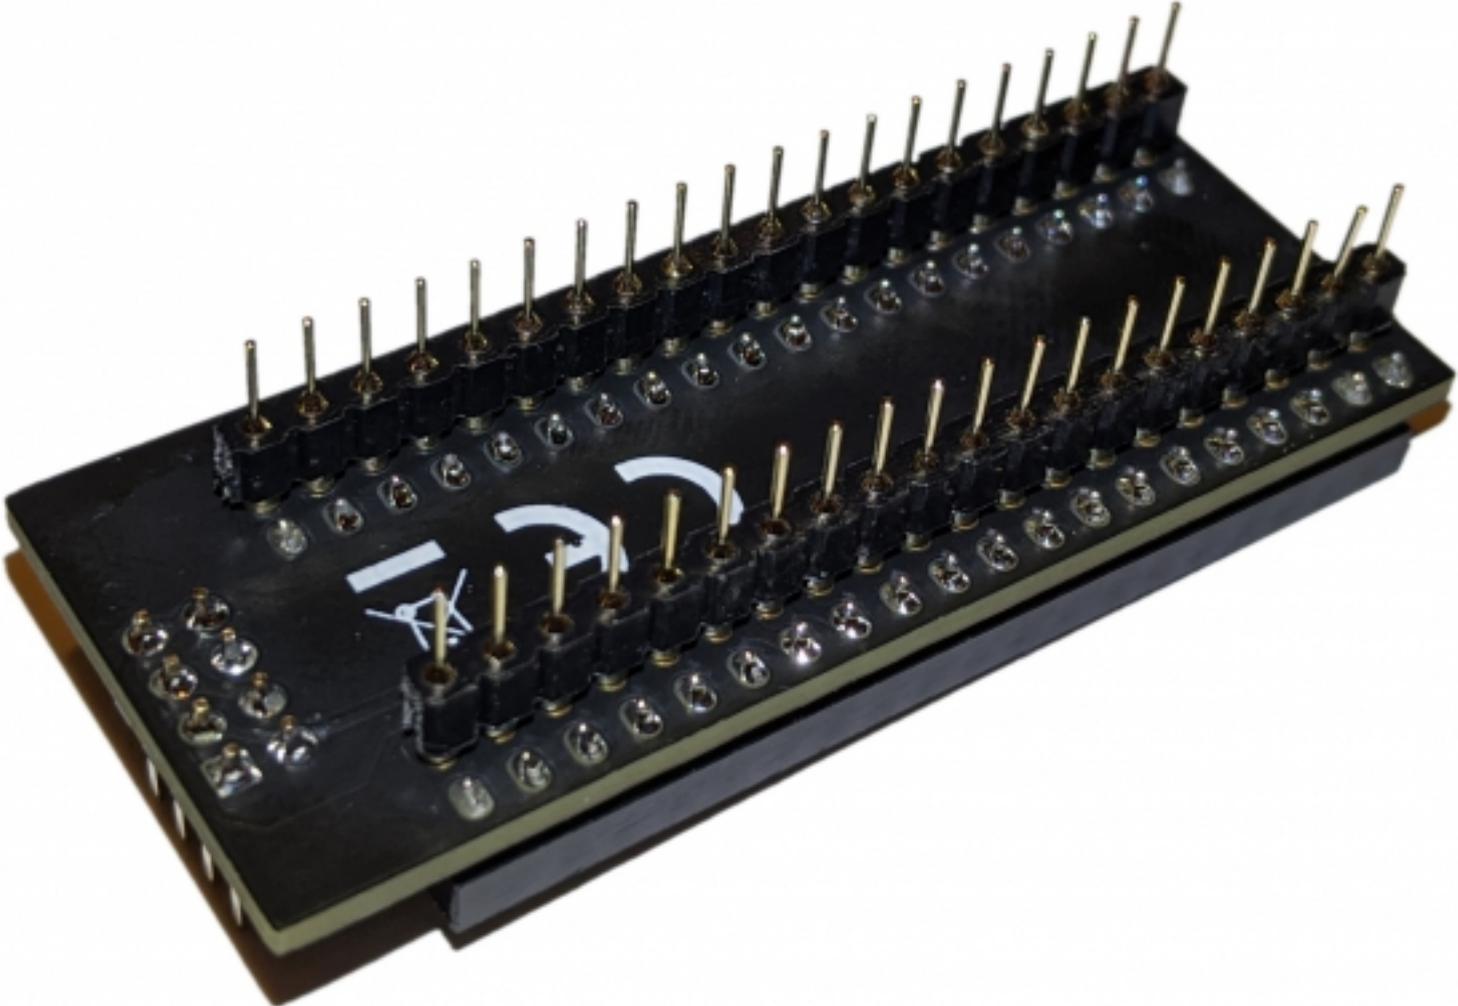

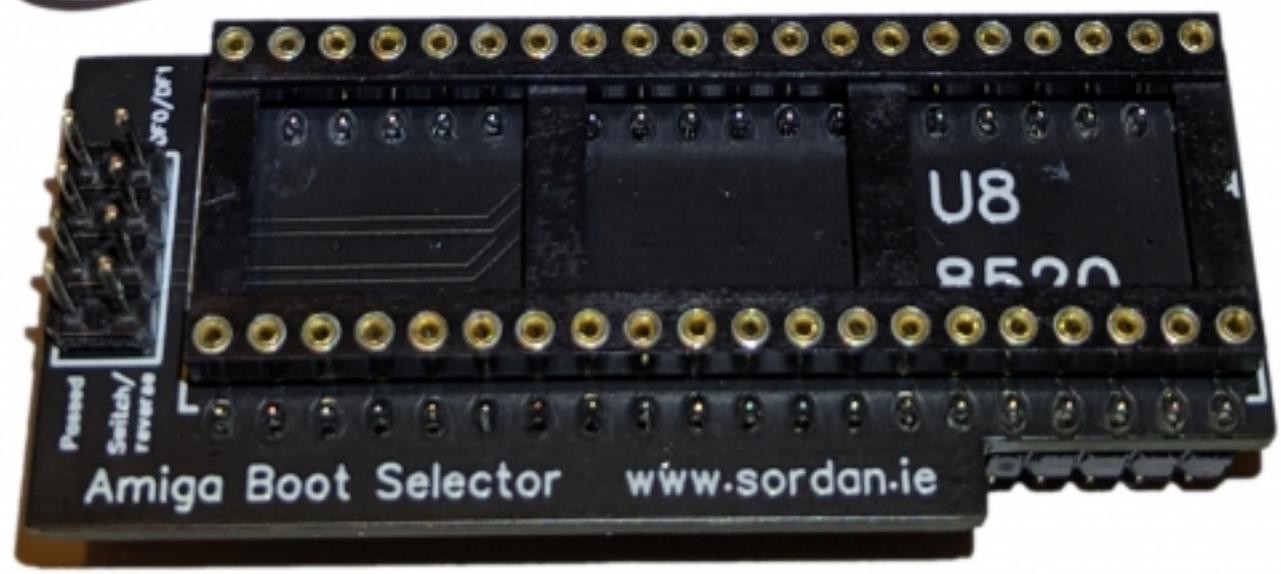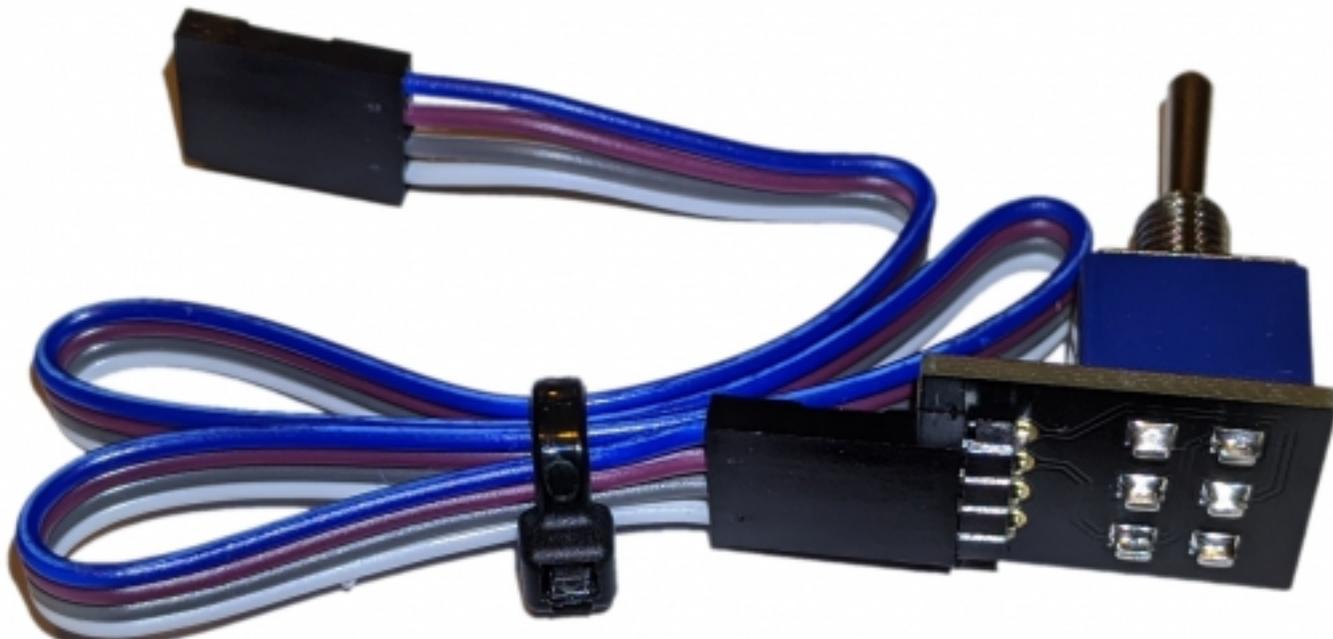

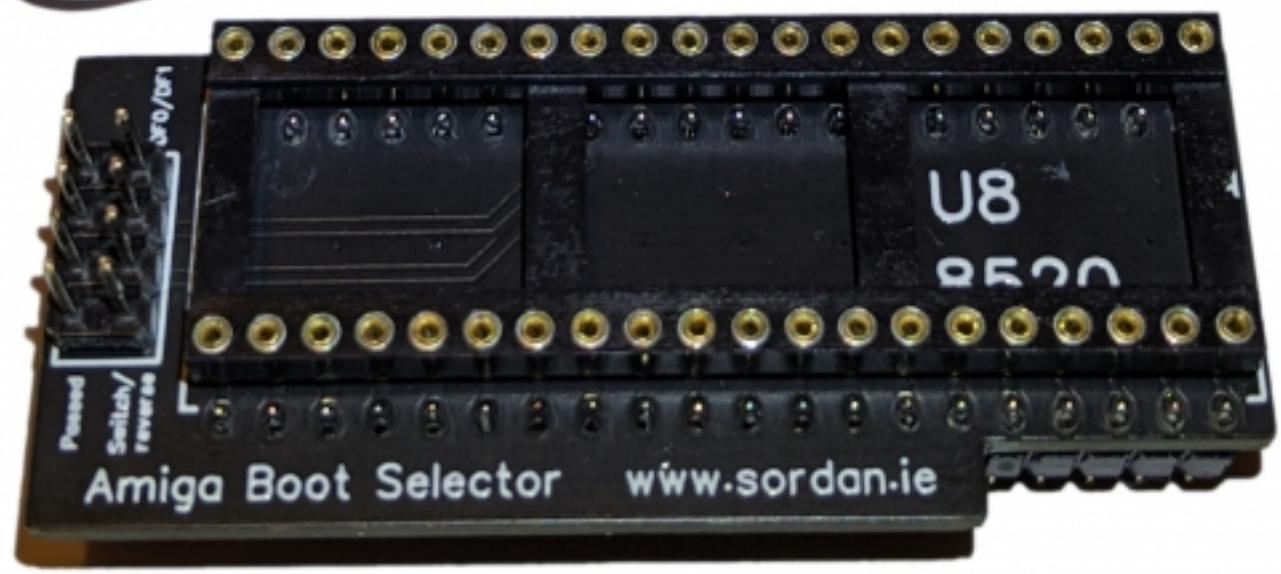

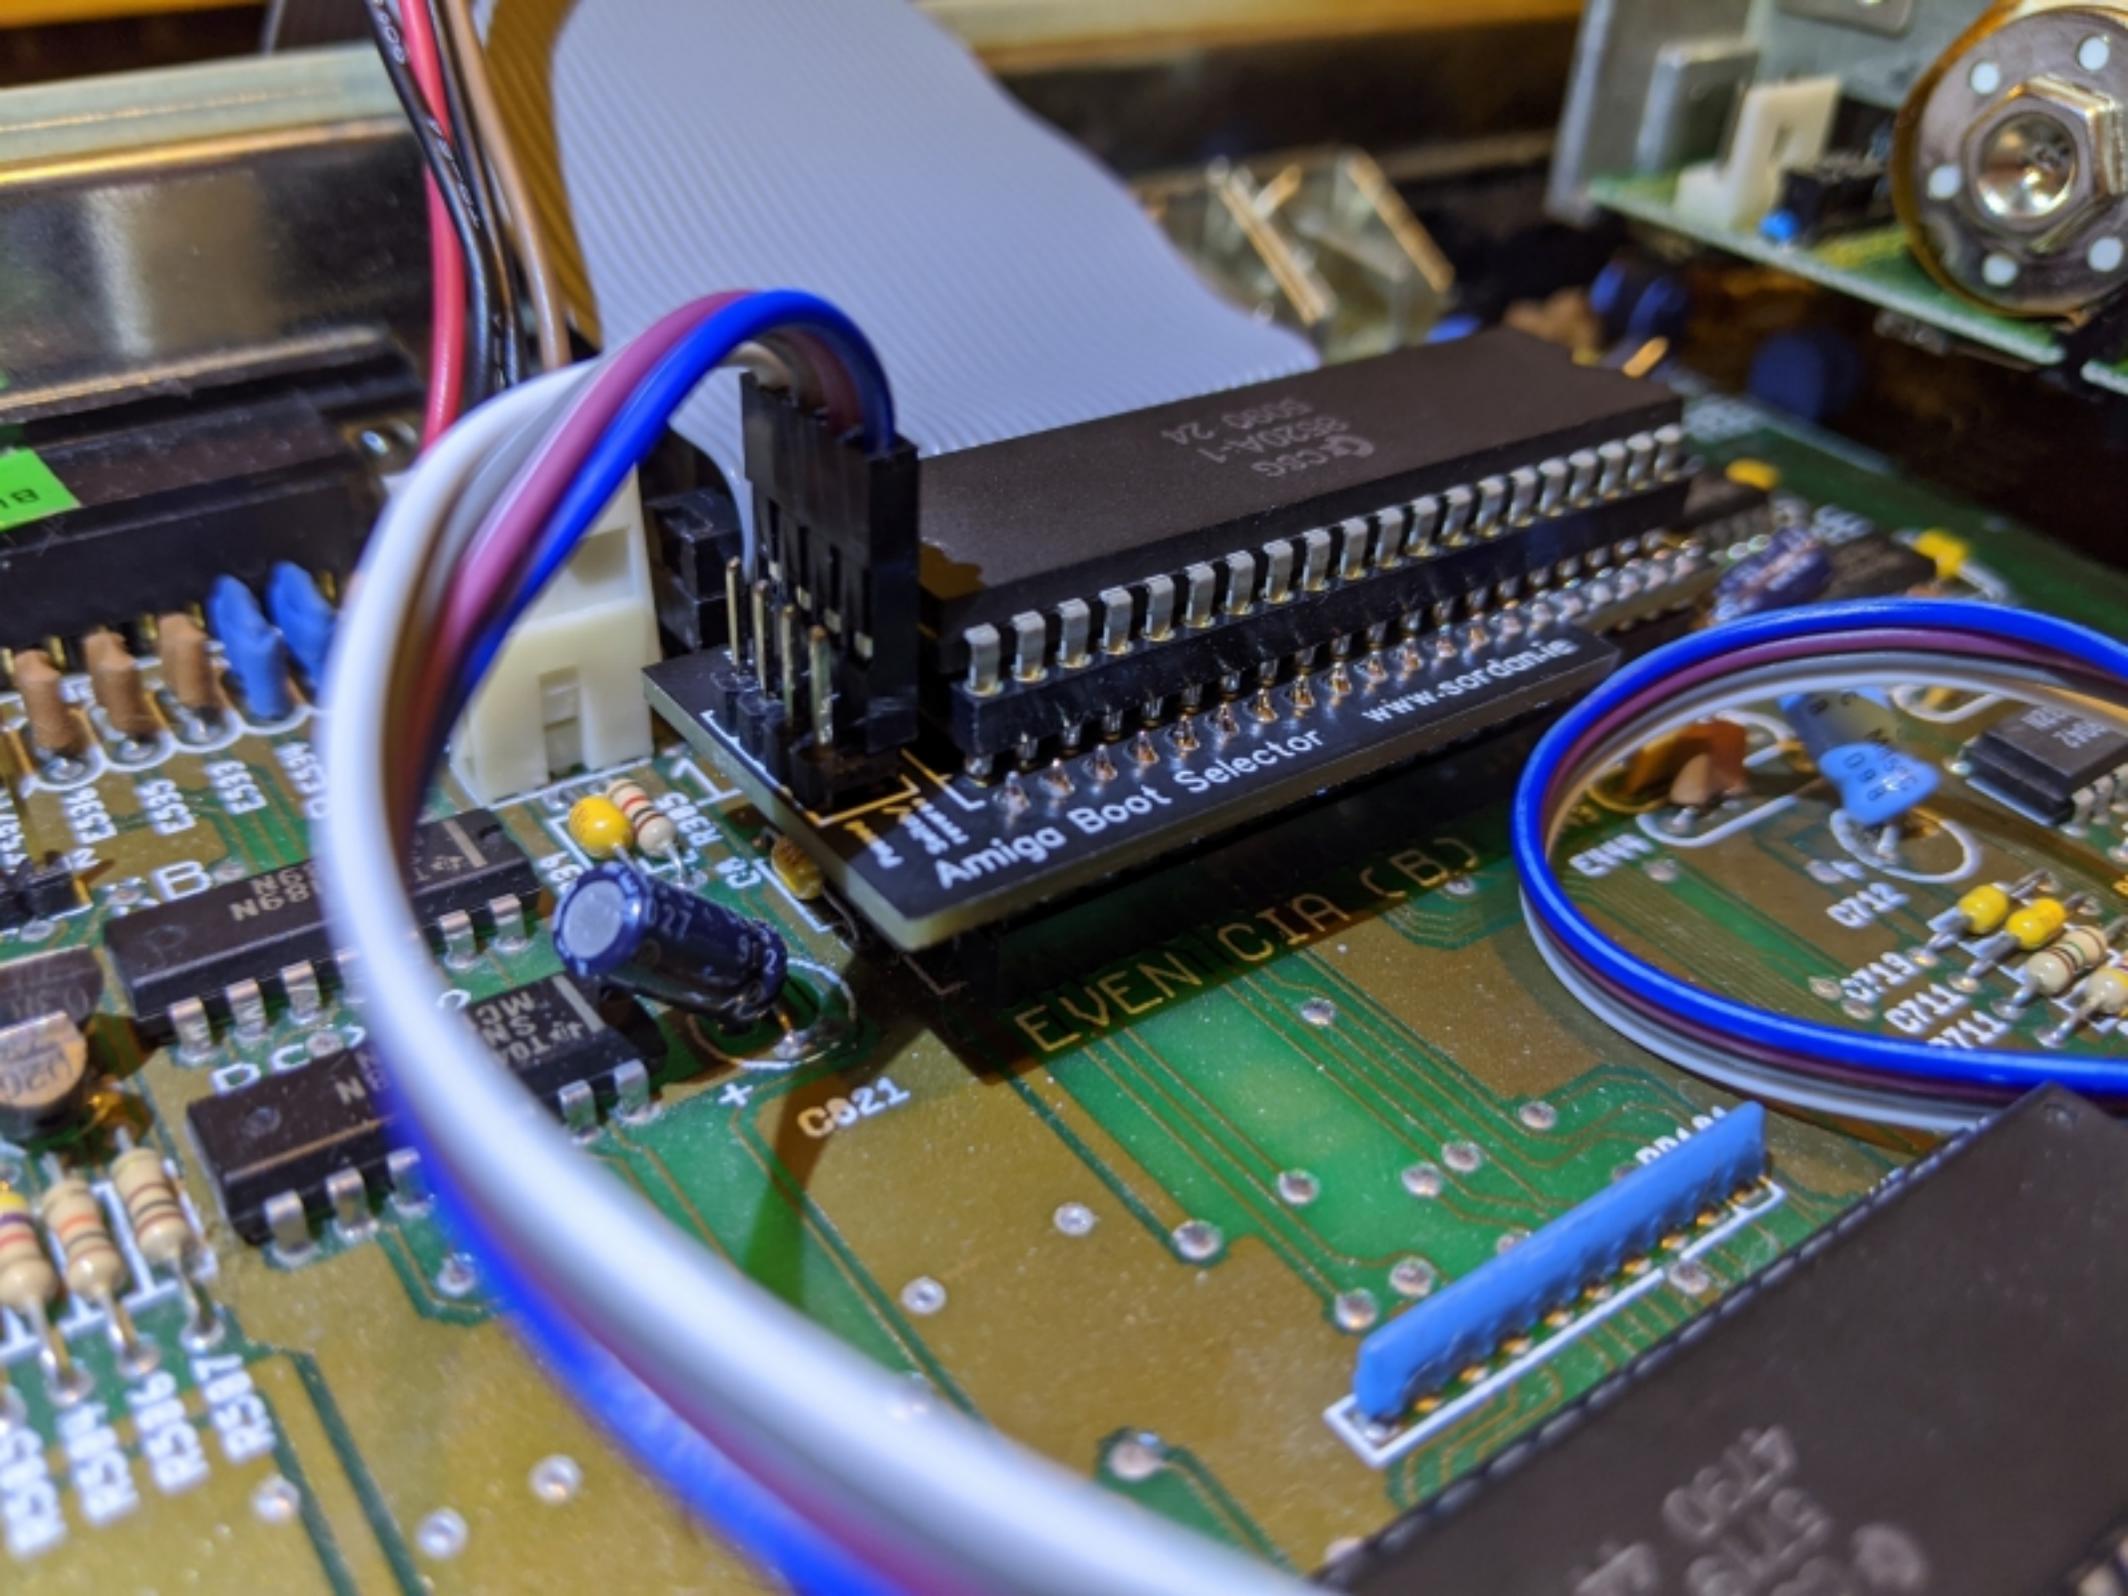

Amiga Boot Selector
www.scf.com.au

EVEN CIA (C)

C821

C822

1852A
1853A
1854A
1855A

NS
NG

SW
NS
MC

D
Z

E819
E820
E821
E822
E823
E824
E825
E826
E827
E828
E829
E830
E831
E832
E833
E834
E835
E836
E837
E838
E839
E840
E841
E842
E843
E844
E845
E846
E847
E848
E849
E850
E851
E852
E853
E854
E855
E856
E857
E858
E859
E860
E861
E862
E863
E864
E865
E866
E867
E868
E869
E870
E871
E872
E873
E874
E875
E876
E877
E878
E879
E880
E881
E882
E883
E884
E885
E886
E887
E888
E889
E890
E891
E892
E893
E894
E895
E896
E897
E898
E899
E900
E901
E902
E903
E904
E905
E906
E907
E908
E909
E910
E911
E912
E913
E914
E915
E916
E917
E918
E919
E920
E921
E922
E923
E924
E925
E926
E927
E928
E929
E930
E931
E932
E933
E934
E935
E936
E937
E938
E939
E940
E941
E942
E943
E944
E945
E946
E947
E948
E949
E950
E951
E952
E953
E954
E955
E956
E957
E958
E959
E960
E961
E962
E963
E964
E965
E966
E967
E968
E969
E970
E971
E972
E973
E974
E975
E976
E977
E978
E979
E980
E981
E982
E983
E984
E985
E986
E987
E988
E989
E990
E991
E992
E993
E994
E995
E996
E997
E998
E999
E1000



CSG
8520A-1
5090 24
Amiga Boot Selector
www.sor-dan.ie

AUDIO FILTER

SP9042
DM7ALS32R

MALAYSIA 9044S
SN74ALS157N

MALAYSIA 9044S
SN74ALS30B

CSG
8518
4190 44

RS232

BURN IN

CSG
8520A-1
5090 24

FLOPPY CN11


EVEN CIA (B)

E443
E444

C021

RS232

BURN IN

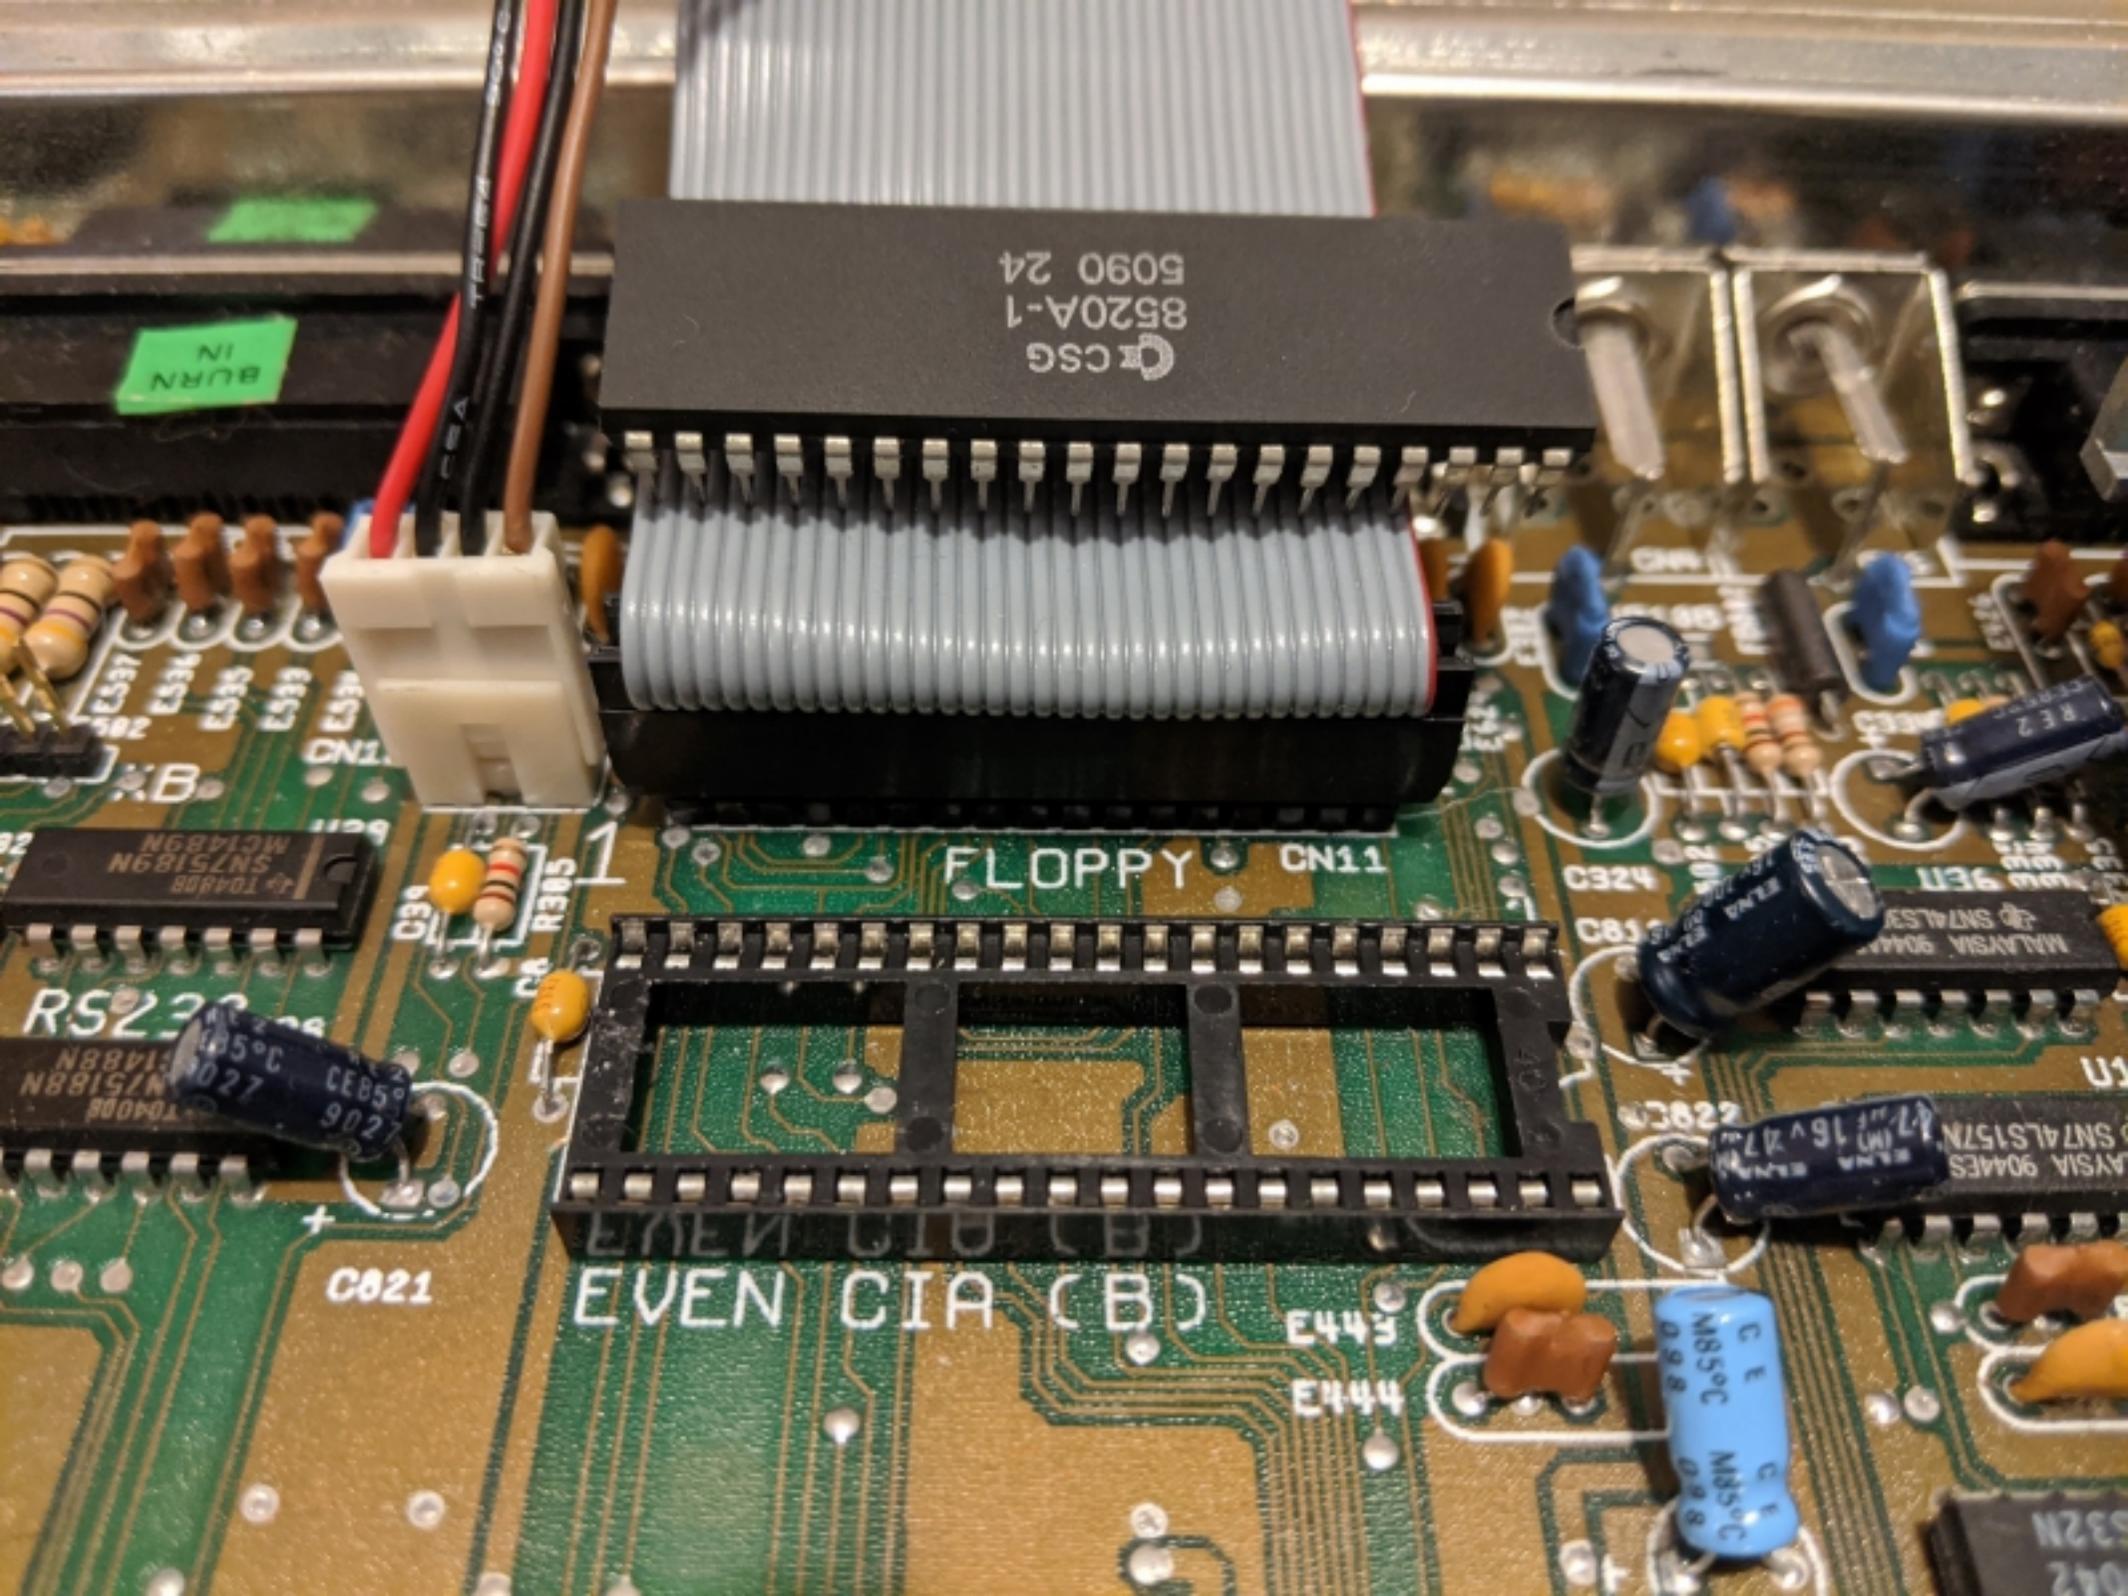



Computers/Tablets & Networking > Vintage Computing > Vintage Parts & Accessories
Computers/Tablets & Networking > Vintage Computing > Vintage Computers & Mainframes

Item: 284091869260



New Premium Boot Selector DF0 DF1 Signal SEL0 from SEL1 Amiga 500 GBA1000

electronics_value_shop (4699)

Item Condition	New
Sale Date	Jan 10, 2021
Quantity	1
Price	GBP 12.99 (approx \$18.16)

[See order details](#)

 eBay Money Back Guarantee
Get the item you ordered or your money back

Item specifics

Brand	Cheap Electronics Shop
Type	Amiga Boot Selector
EAN	0717526186698

Seller's description

[See full description](#)

Boot Selector DF0/DF1 DF1/DF0 Signal SEL0 from SEL1 Amiga 500

New better version with golden PINs and now compatible even with GBA1000.

This device can change your floppy drive from DF0 to DF1 and opposite. By switch the button you can change your internal DF0 into DF1 or you can change your external floppy drive (also Gotek HxC, Gotek Cortex, HxC made by Lotharek) into DF0 and you can boot from your external drive without any problem.

The best option for Gotek and HxC owners who wants to boot games normally from DF1 external, additional floppy drive. Please note you can switch only if Amiga is off.




How to install:


- 1.) Switch off your Amiga.
- 2.) Remove CSG module (based near floppy cable)
- 3.) Put boot selector into CSG module socket
- 4.) Put CSG module on top of the boot selector
- 5.) Connect switch on/off to boot selector (included)

Switcher should be installed on the right side golden PINs (please see photo) and does not matter which way you will connect it. It will work anyway.

You can use this item on 2 different ways - with switcher (included) or without switcher using jumpers for permanently settings (included).

Listing images

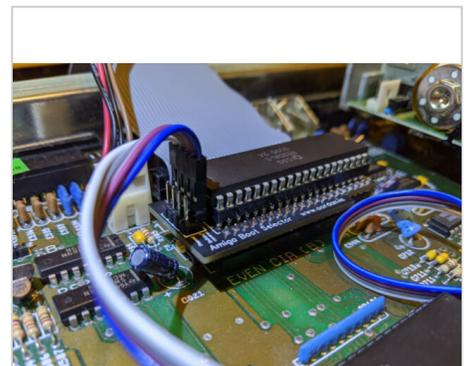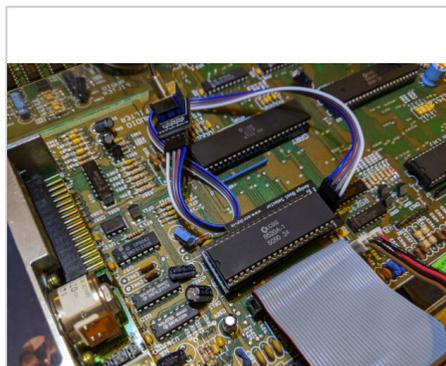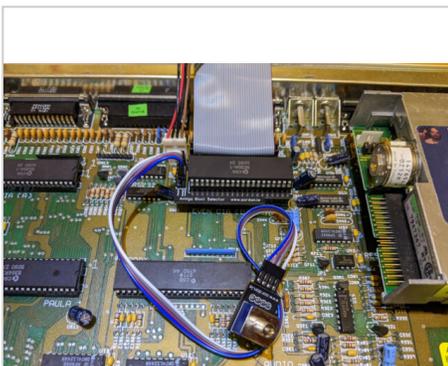

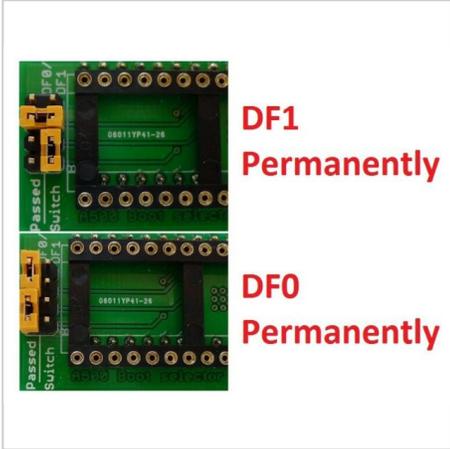

This page is formatted for printing and does not include all the information contained in the listing. You must select all options to print all of the information in the listing including the listing summary, seller's description, and images.

Copyright © 1995-2021 eBay Inc. All Rights Reserved. Accessibility, User Agreement, Privacy, Cookies, Do not sell my personal information and AdChoice ⓘ

